






<b>ANGLE OF ROTATION SENSOR, MAIL PILLAR</b>	<b>SEGMENT 1</b>
<b>ANGLE OF ROTATION SENSOR, TENSIONING BAR</b>	<b>SEGMENT 1</b>
<b>REAR WINDOW, BOTTOM</b>	<b>NO</b>
<b>CONVERTIBLE TOP COMPARTMENT LID RELEASE, LEFT</b>	<b>LOCKED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, LEFT</b>	<b>CLOSED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, RIGHT</b>	<b>CLOSED</b>
<b>COWL PANEL LOCKED</b>	<b>YES</b>
<b>COWL PANEL UNLOCKED</b>	<b>NO</b>
<b>CONVERTIBLE COMPARTMENT LID</b>	<b>NOT COMPLETELY OPEN</b>

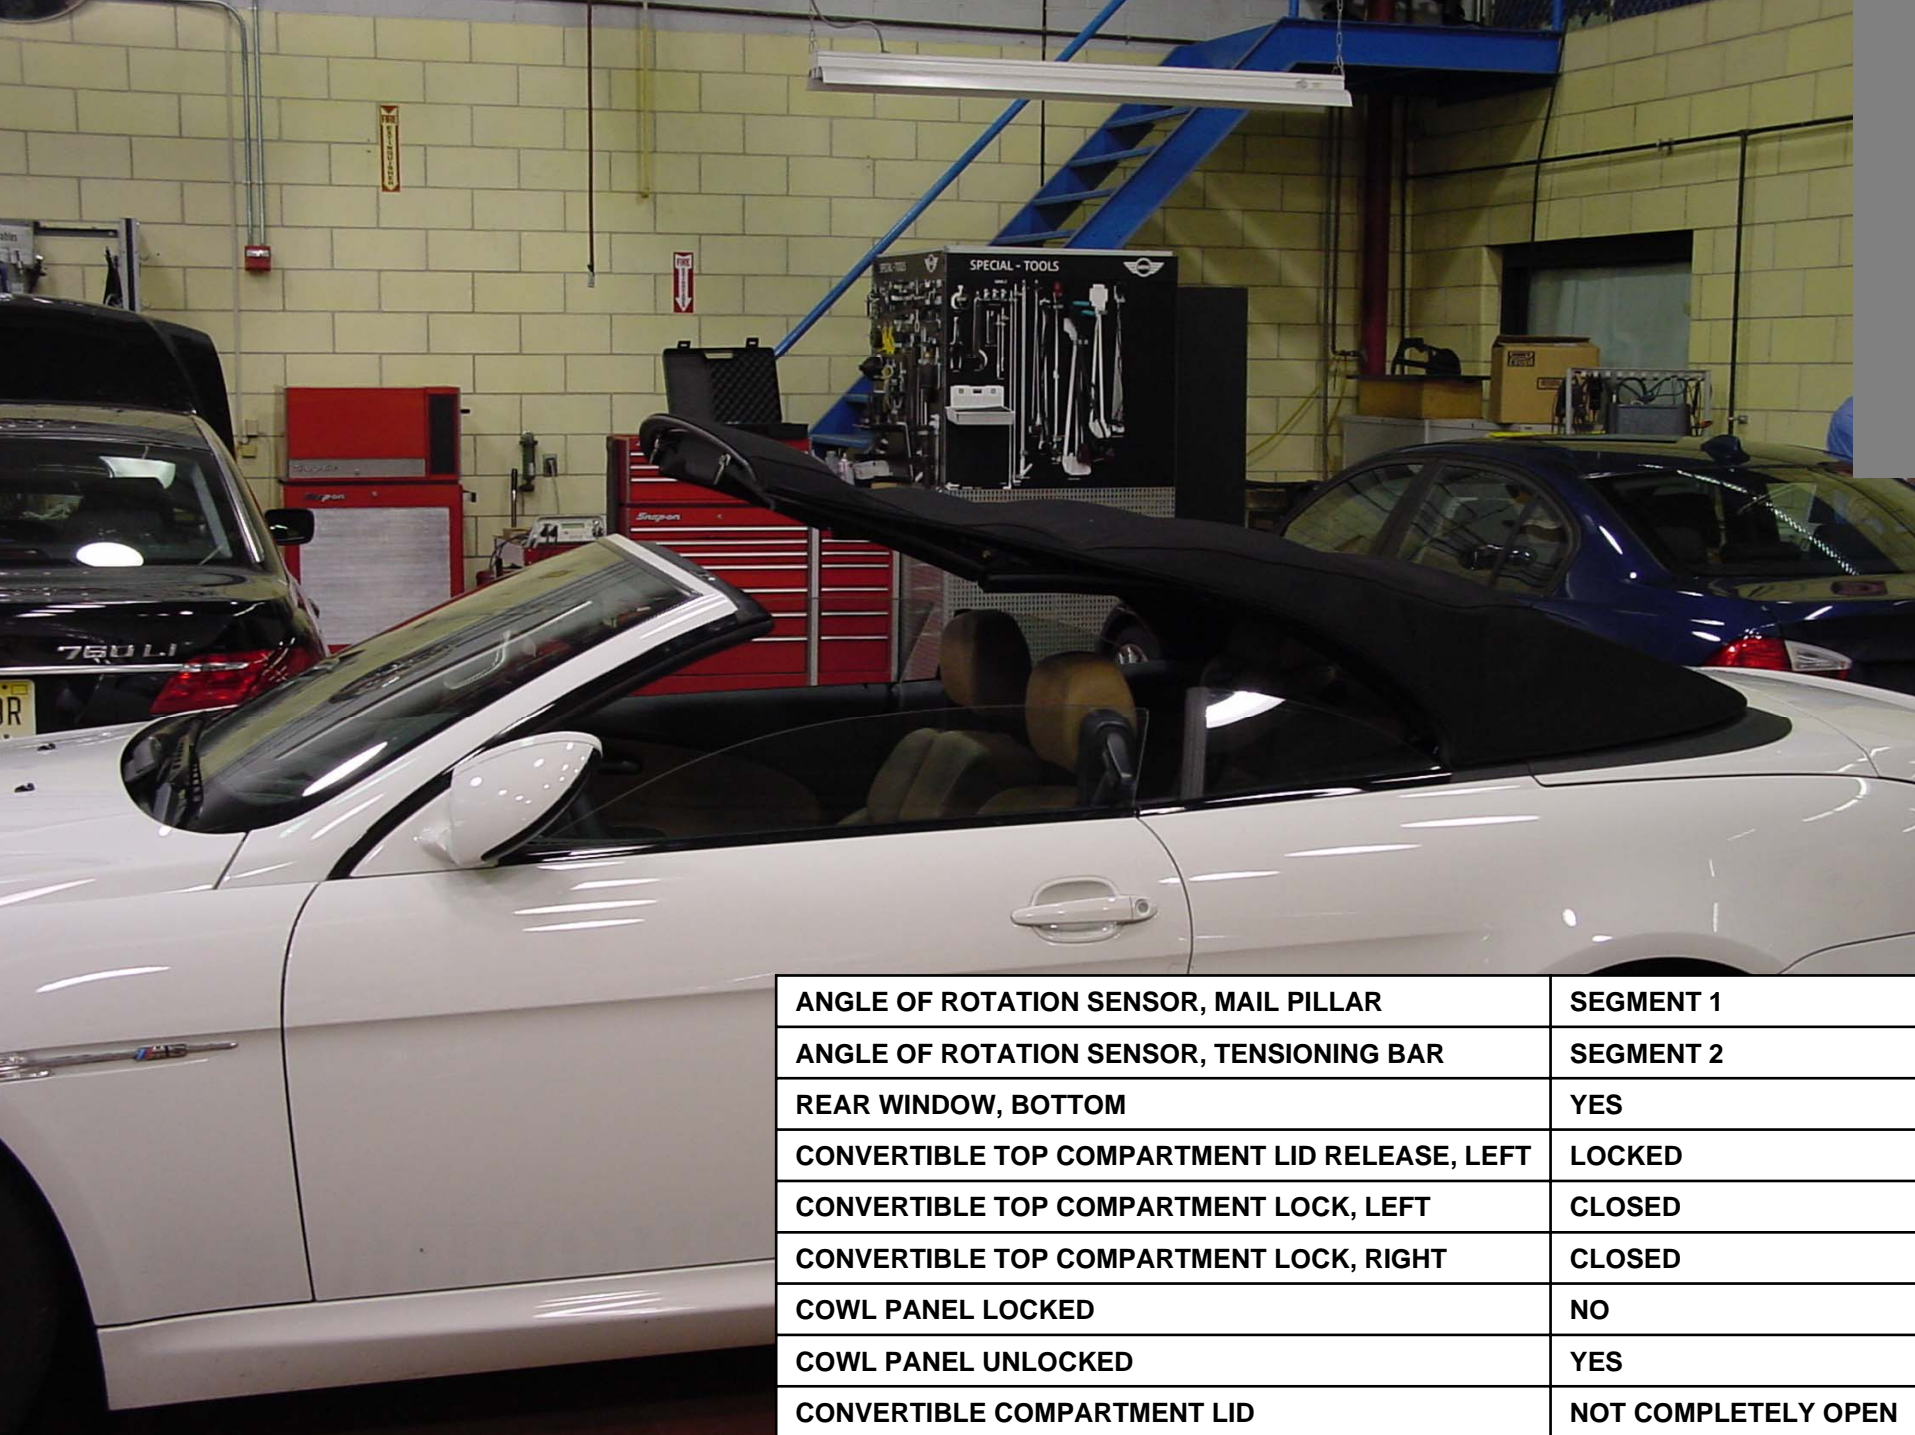

<b>ANGLE OF ROTATION SENSOR, MAIL PILLAR</b>	<b>SEGMENT 1</b>
<b>ANGLE OF ROTATION SENSOR, TENSIONING BAR</b>	<b>SEGMENT 2</b>
<b>REAR WINDOW, BOTTOM</b>	<b>YES</b>
<b>CONVERTIBLE TOP COMPARTMENT LID RELEASE, LEFT</b>	<b>LOCKED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, LEFT</b>	<b>CLOSED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, RIGHT</b>	<b>CLOSED</b>
<b>COWL PANEL LOCKED</b>	<b>NO</b>
<b>COWL PANEL UNLOCKED</b>	<b>YES</b>
<b>CONVERTIBLE COMPARTMENT LID</b>	<b>NOT COMPLETELY OPEN</b>

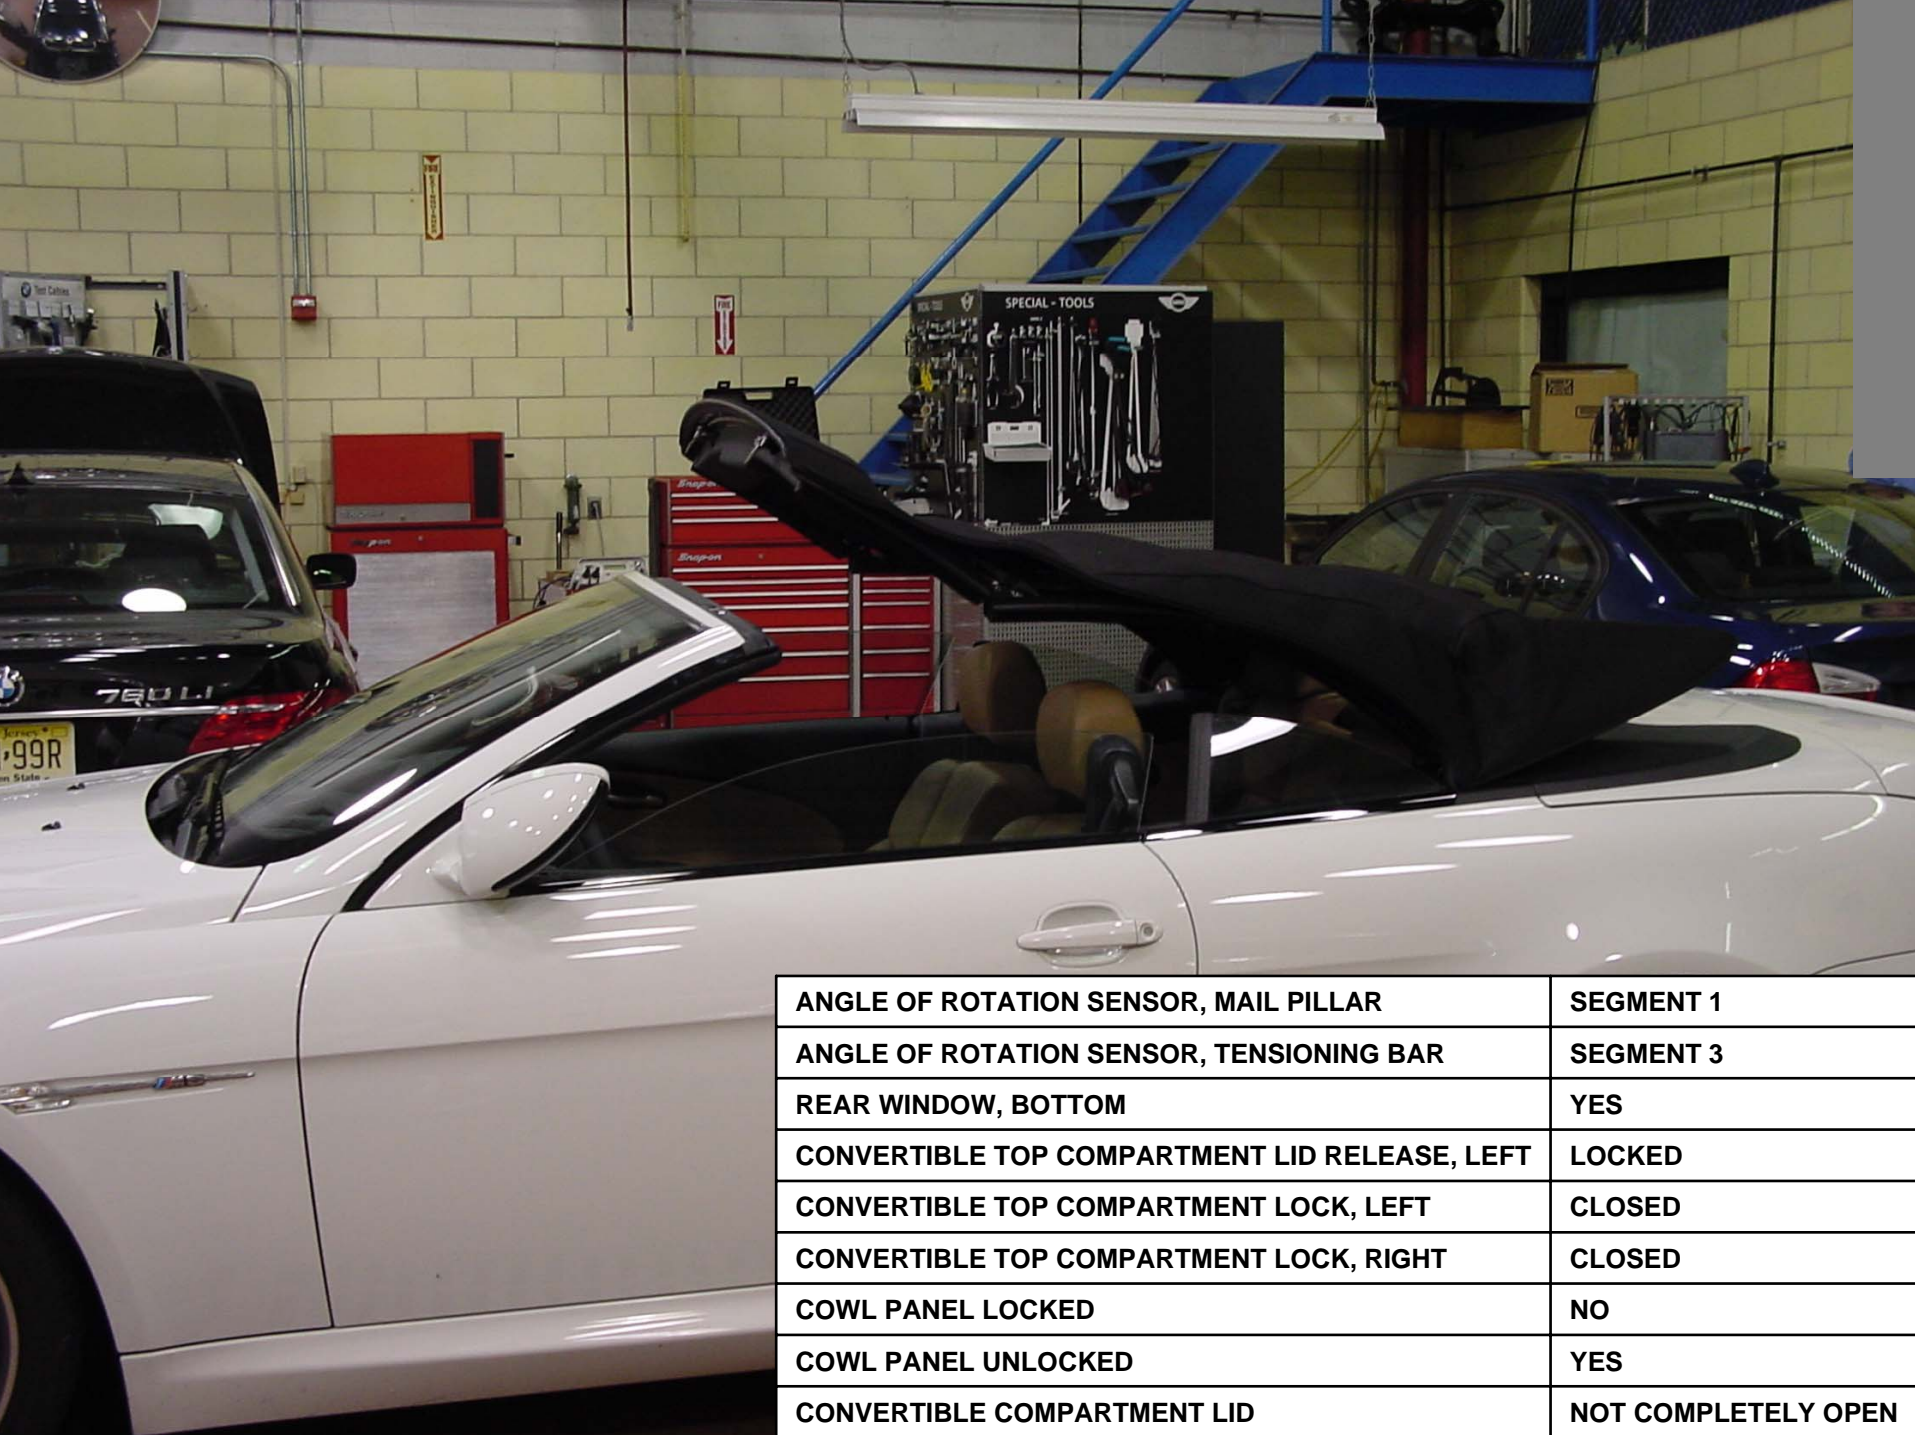


<b>ANGLE OF ROTATION SENSOR, MAIL PILLAR</b>	<b>SEGMENT 1</b>
<b>ANGLE OF ROTATION SENSOR, TENSIONING BAR</b>	<b>SEGMENT 3</b>
<b>REAR WINDOW, BOTTOM</b>	<b>YES</b>
<b>CONVERTIBLE TOP COMPARTMENT LID RELEASE, LEFT</b>	<b>LOCKED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, LEFT</b>	<b>CLOSED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, RIGHT</b>	<b>CLOSED</b>
<b>COWL PANEL LOCKED</b>	<b>NO</b>
<b>COWL PANEL UNLOCKED</b>	<b>YES</b>
<b>CONVERTIBLE COMPARTMENT LID</b>	<b>NOT COMPLETELY OPEN</b>

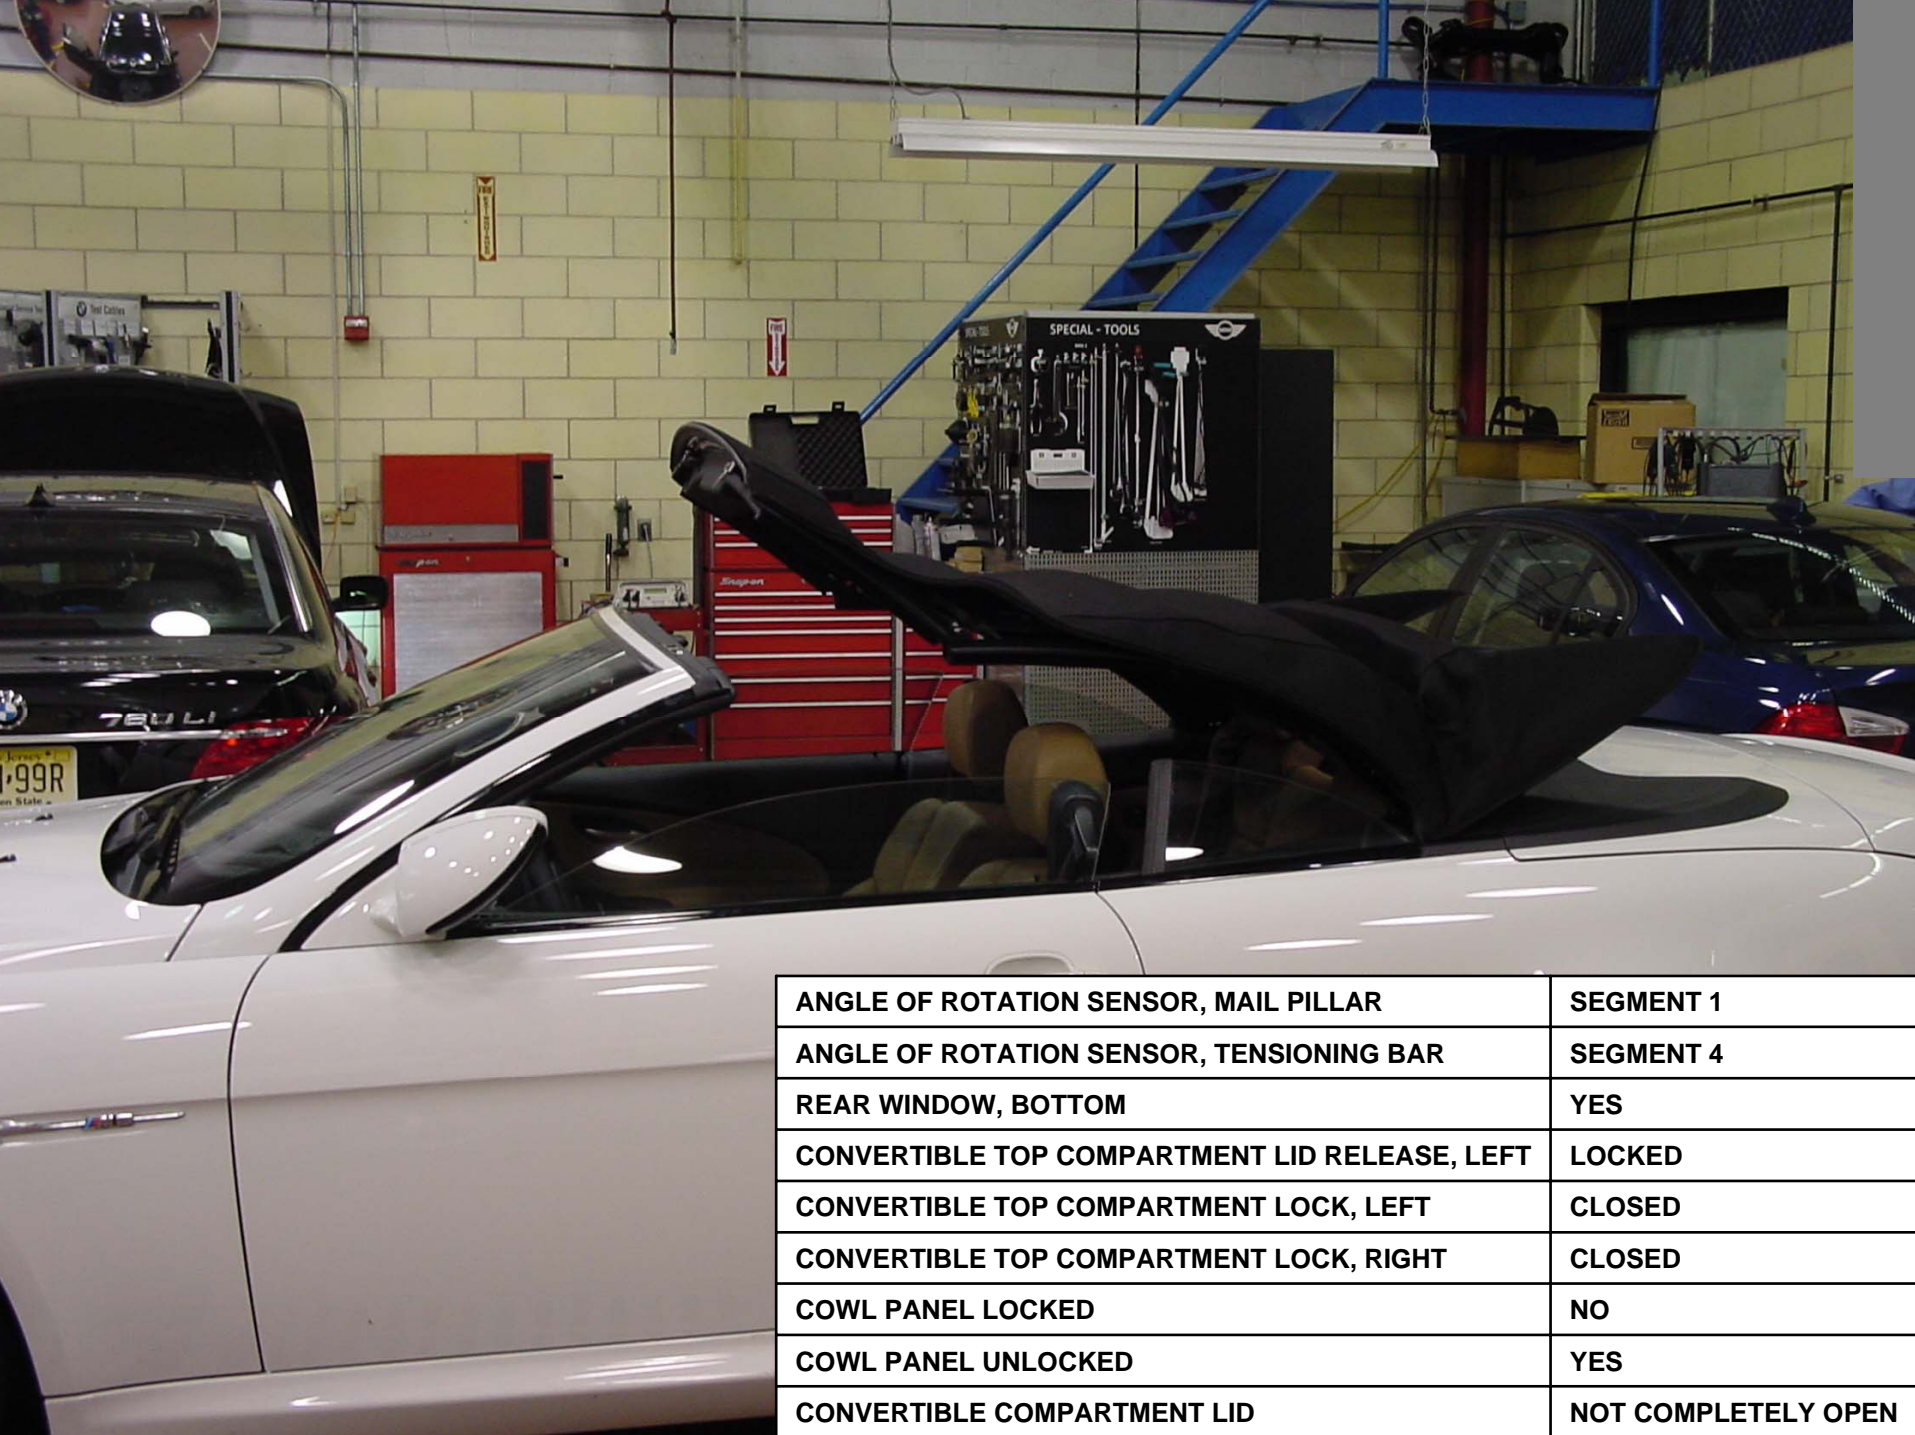

<b>ANGLE OF ROTATION SENSOR, MAIL PILLAR</b>	<b>SEGMENT 1</b>
<b>ANGLE OF ROTATION SENSOR, TENSIONING BAR</b>	<b>SEGMENT 4</b>
<b>REAR WINDOW, BOTTOM</b>	<b>YES</b>
<b>CONVERTIBLE TOP COMPARTMENT LID RELEASE, LEFT</b>	<b>LOCKED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, LEFT</b>	<b>CLOSED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, RIGHT</b>	<b>CLOSED</b>
<b>COWL PANEL LOCKED</b>	<b>NO</b>
<b>COWL PANEL UNLOCKED</b>	<b>YES</b>
<b>CONVERTIBLE COMPARTMENT LID</b>	<b>NOT COMPLETELY OPEN</b>




<b>ANGLE OF ROTATION SENSOR, MAIL PILLAR</b>	<b>SEGMENT 1</b>
<b>ANGLE OF ROTATION SENSOR, TENSIONING BAR</b>	<b>SEGMENT 5</b>
<b>REAR WINDOW, BOTTOM</b>	<b>YES</b>
<b>CONVERTIBLE TOP COMPARTMENT LID RELEASE, LEFT</b>	<b>LOCKED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, LEFT</b>	<b>CLOSED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, RIGHT</b>	<b>CLOSED</b>
<b>COWL PANEL LOCKED</b>	<b>NO</b>
<b>COWL PANEL UNLOCKED</b>	<b>YES</b>
<b>CONVERTIBLE COMPARTMENT LID</b>	<b>NOT COMPLETELY OPEN</b>

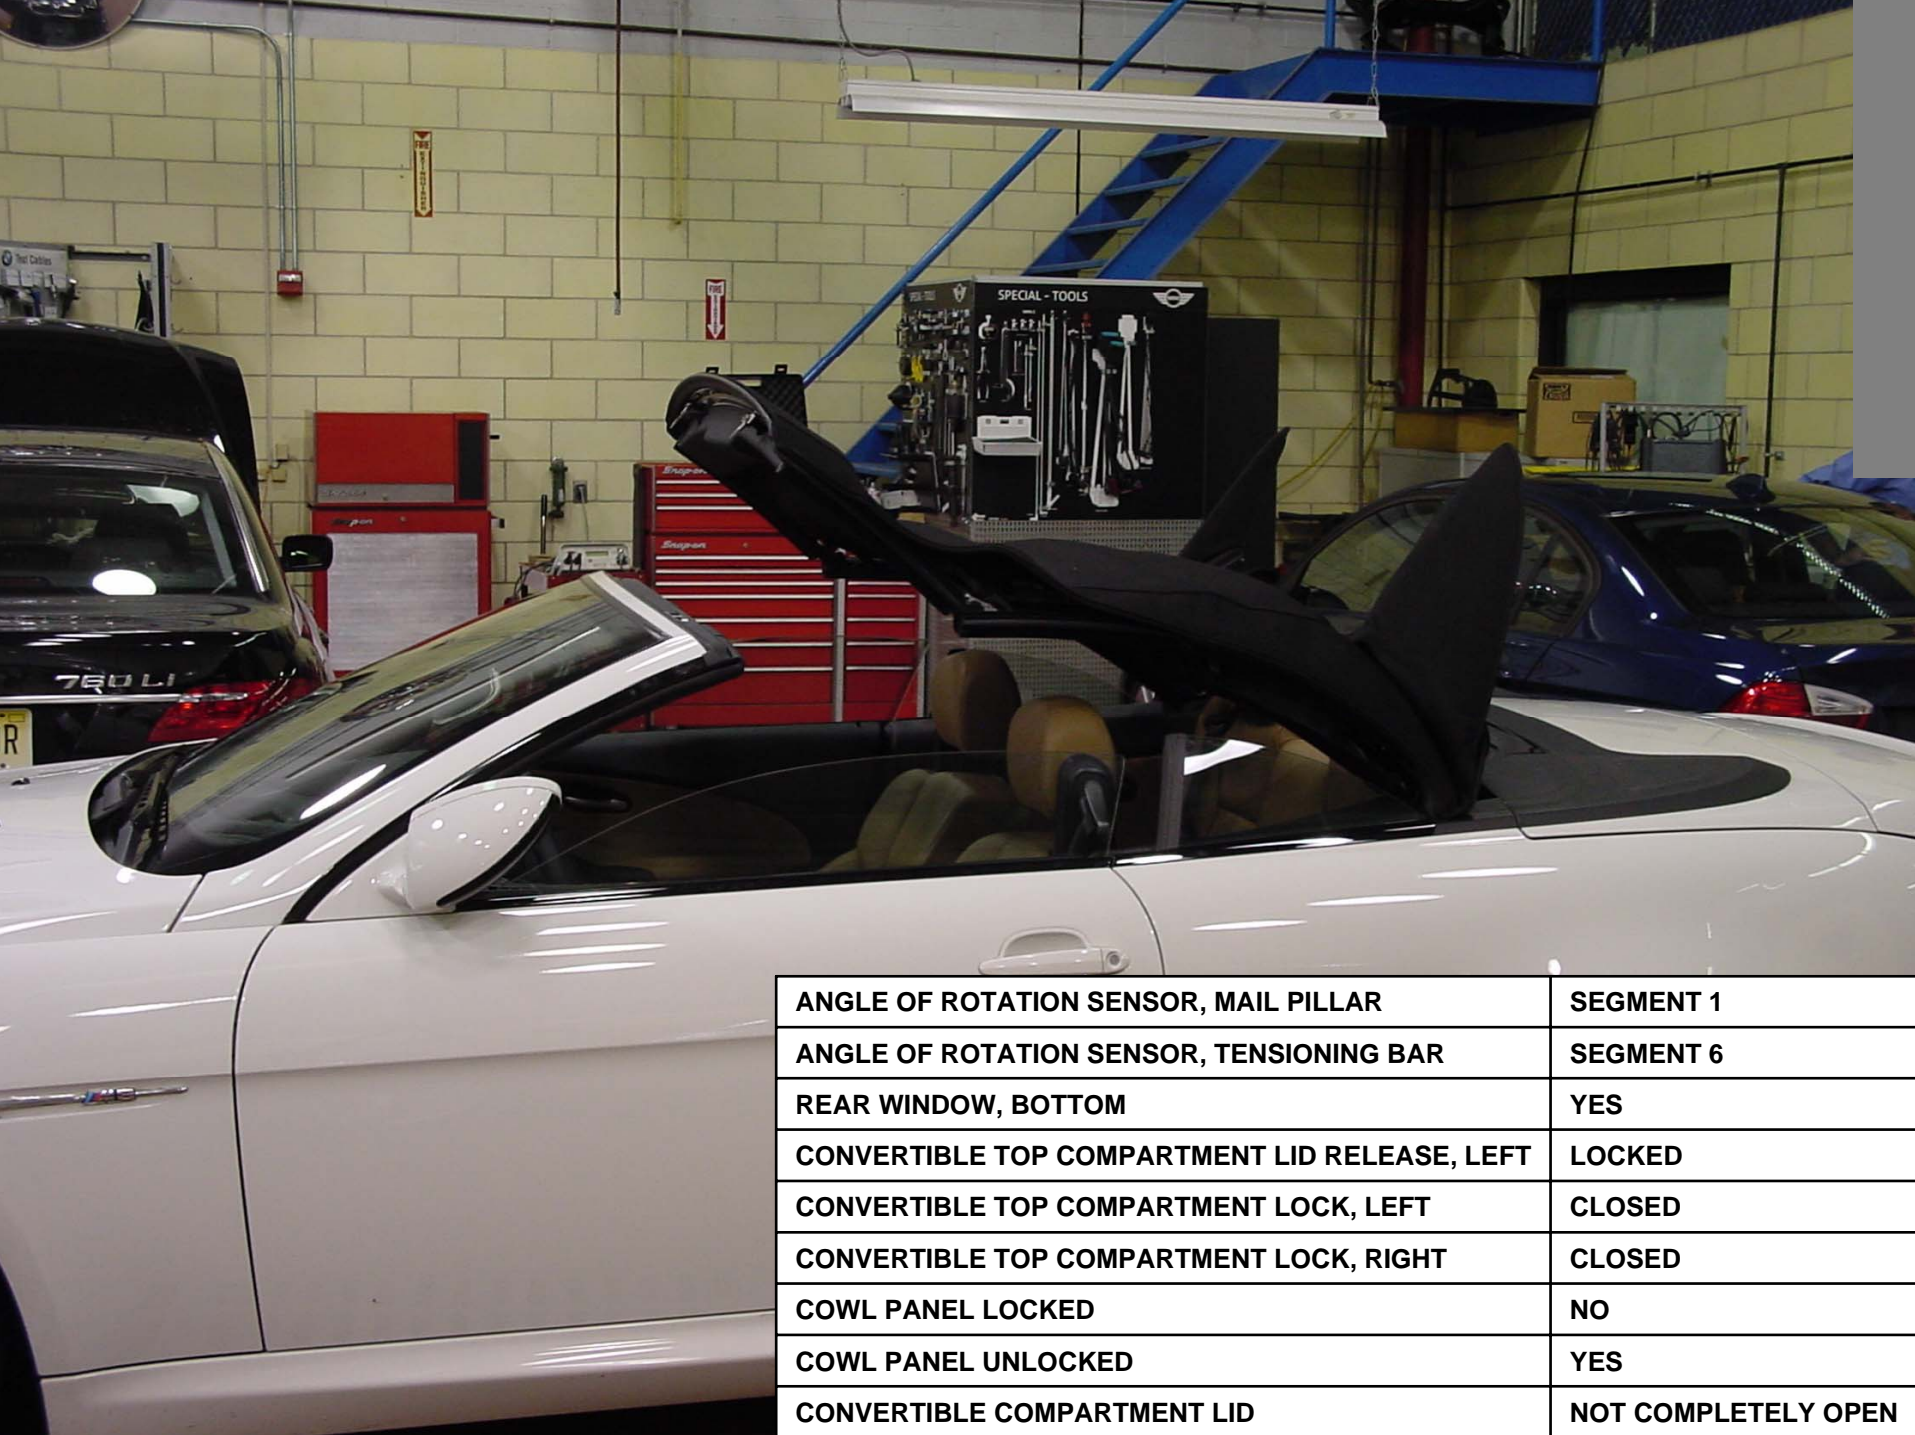

<b>ANGLE OF ROTATION SENSOR, MAIL PILLAR</b>	<b>SEGMENT 1</b>
<b>ANGLE OF ROTATION SENSOR, TENSIONING BAR</b>	<b>SEGMENT 6</b>
<b>REAR WINDOW, BOTTOM</b>	<b>YES</b>
<b>CONVERTIBLE TOP COMPARTMENT LID RELEASE, LEFT</b>	<b>LOCKED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, LEFT</b>	<b>CLOSED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, RIGHT</b>	<b>CLOSED</b>
<b>COWL PANEL LOCKED</b>	<b>NO</b>
<b>COWL PANEL UNLOCKED</b>	<b>YES</b>
<b>CONVERTIBLE COMPARTMENT LID</b>	<b>NOT COMPLETELY OPEN</b>




<b>ANGLE OF ROTATION SENSOR, MAIL PILLAR</b>	<b>SEGMENT 2</b>
<b>ANGLE OF ROTATION SENSOR, TENSIONING BAR</b>	<b>SEGMENT 6</b>
<b>REAR WINDOW, BOTTOM</b>	<b>YES</b>
<b>CONVERTIBLE TOP COMPARTMENT LID RELEASE, LEFT</b>	<b>UNLOCKED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, LEFT</b>	<b>NOT CLOSED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, RIGHT</b>	<b>NOT CLOSED</b>
<b>COWL PANEL LOCKED</b>	<b>NO</b>
<b>COWL PANEL UNLOCKED</b>	<b>YES</b>
<b>CONVERTIBLE COMPARTMENT LID</b>	<b>COMPLETELY OPEN</b>

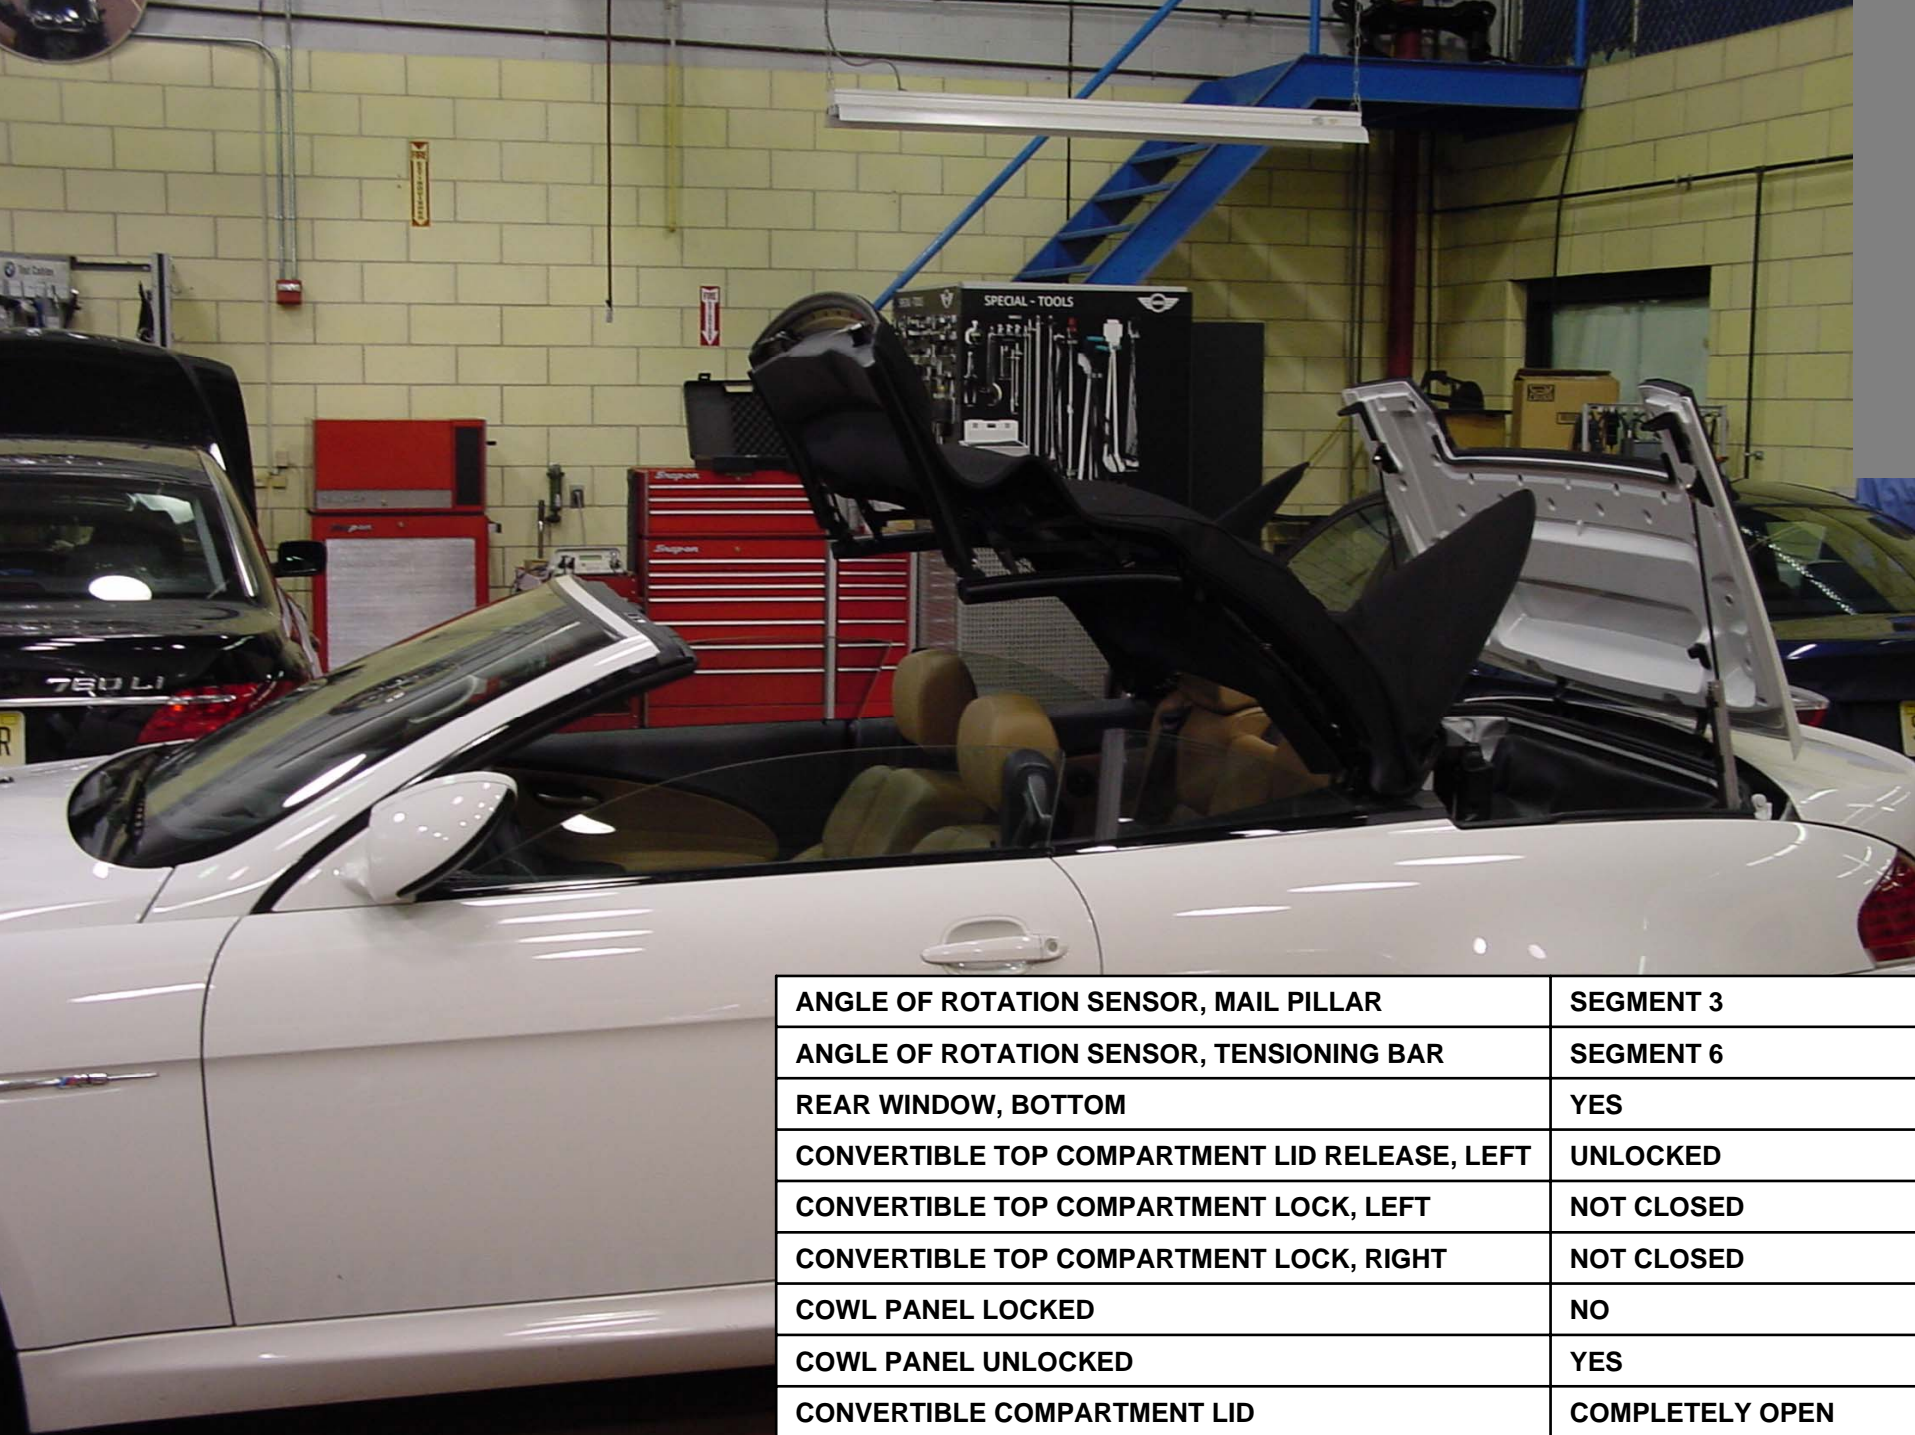

<b>ANGLE OF ROTATION SENSOR, MAIL PILLAR</b>	<b>SEGMENT 3</b>
<b>ANGLE OF ROTATION SENSOR, TENSIONING BAR</b>	<b>SEGMENT 6</b>
<b>REAR WINDOW, BOTTOM</b>	<b>YES</b>
<b>CONVERTIBLE TOP COMPARTMENT LID RELEASE, LEFT</b>	<b>UNLOCKED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, LEFT</b>	<b>NOT CLOSED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, RIGHT</b>	<b>NOT CLOSED</b>
<b>COWL PANEL LOCKED</b>	<b>NO</b>
<b>COWL PANEL UNLOCKED</b>	<b>YES</b>
<b>CONVERTIBLE COMPARTMENT LID</b>	<b>COMPLETELY OPEN</b>



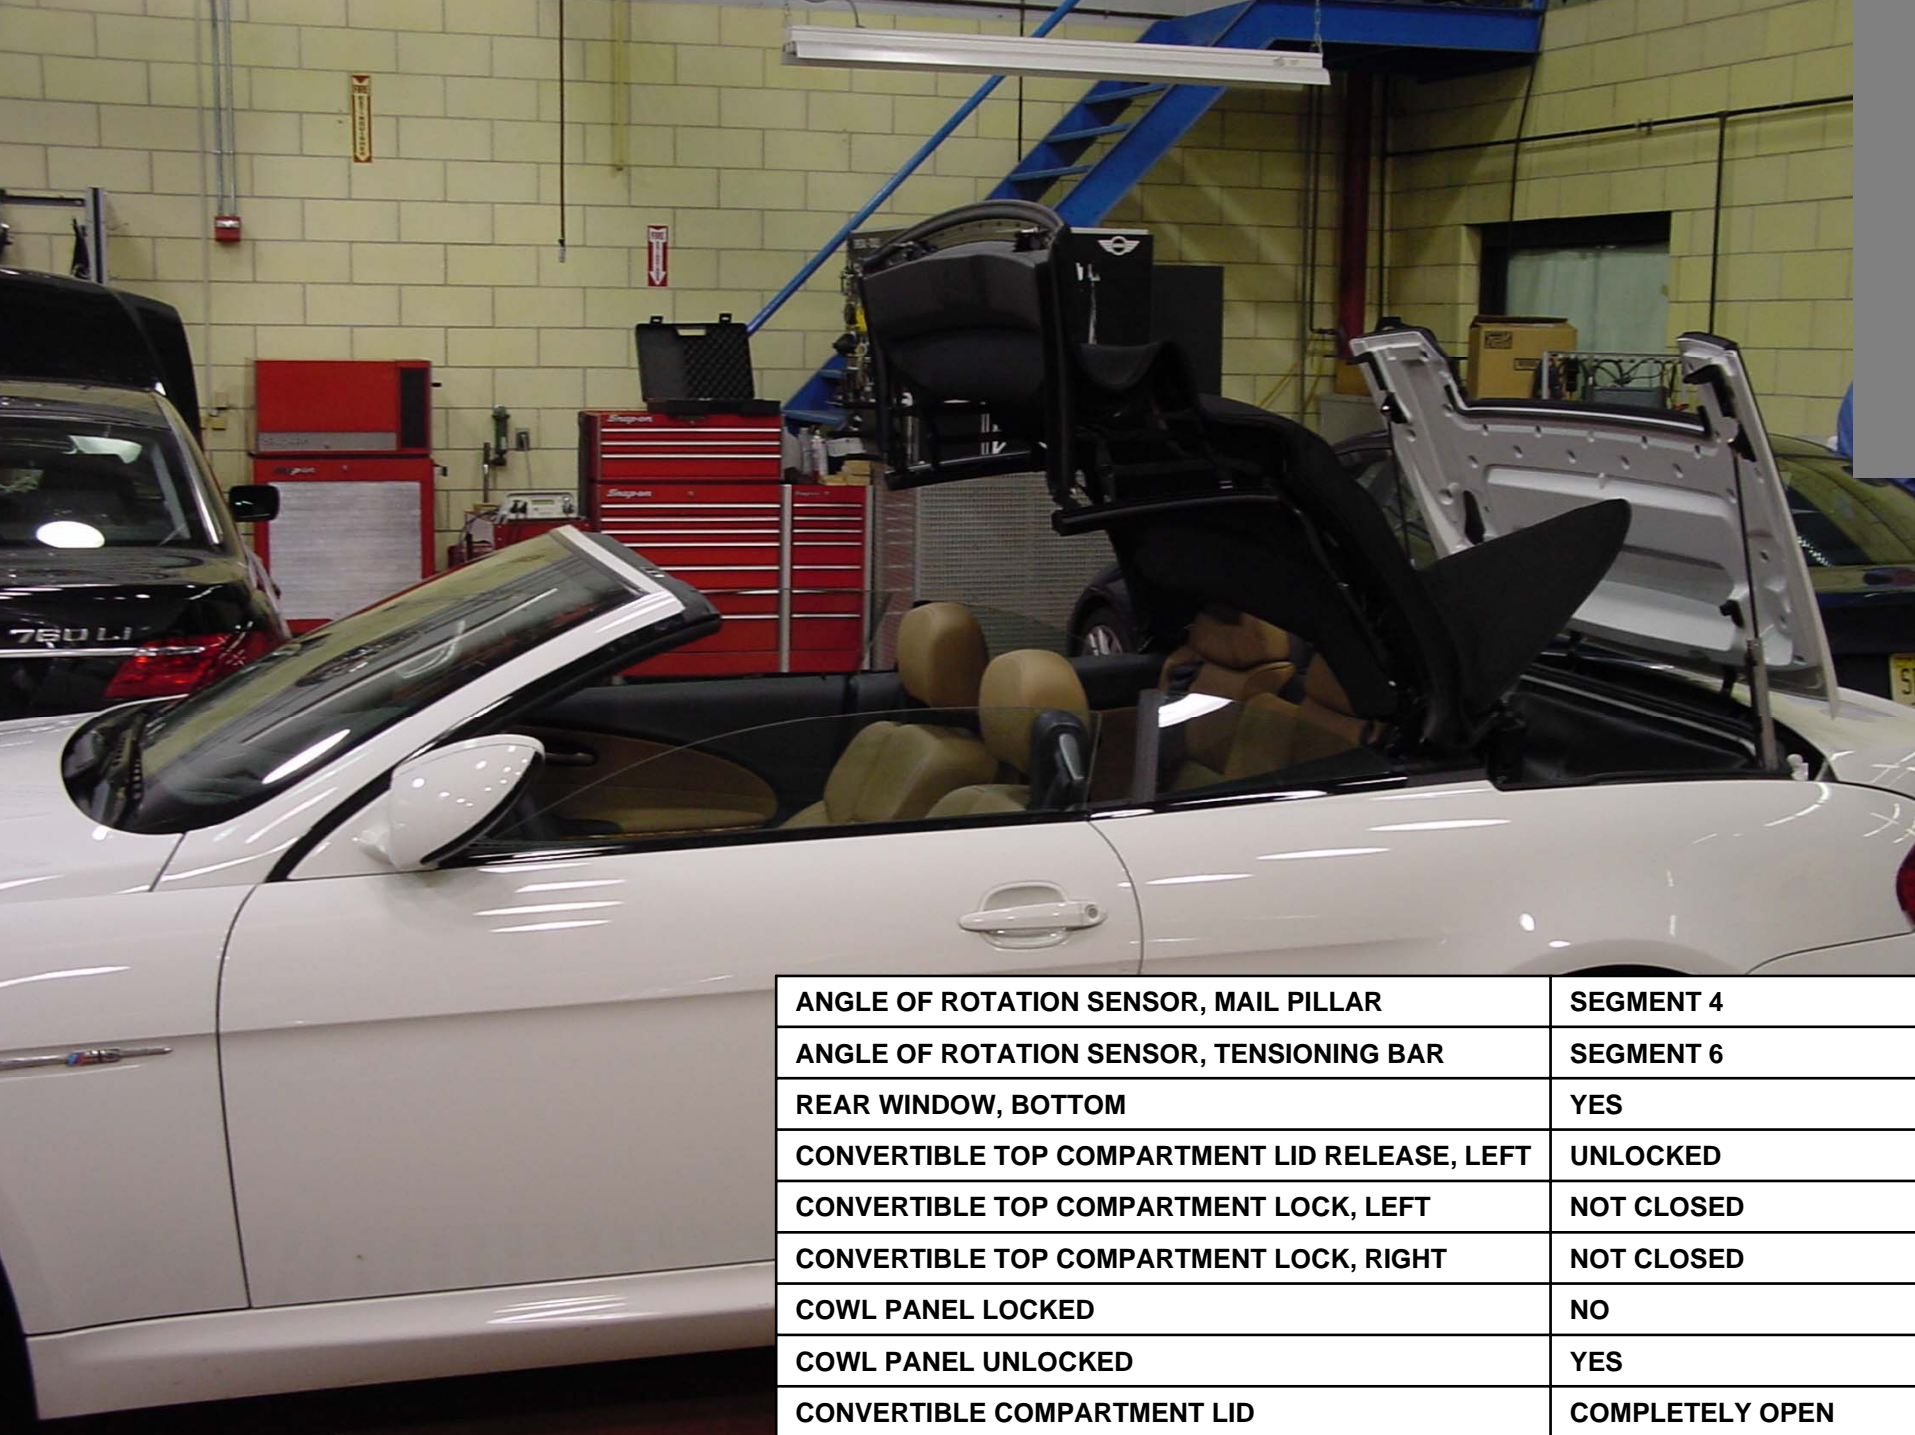

<b>ANGLE OF ROTATION SENSOR, MAIL PILLAR</b>	<b>SEGMENT 4</b>
<b>ANGLE OF ROTATION SENSOR, TENSIONING BAR</b>	<b>SEGMENT 6</b>
<b>REAR WINDOW, BOTTOM</b>	<b>YES</b>
<b>CONVERTIBLE TOP COMPARTMENT LID RELEASE, LEFT</b>	<b>UNLOCKED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, LEFT</b>	<b>NOT CLOSED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, RIGHT</b>	<b>NOT CLOSED</b>
<b>COWL PANEL LOCKED</b>	<b>NO</b>
<b>COWL PANEL UNLOCKED</b>	<b>YES</b>
<b>CONVERTIBLE COMPARTMENT LID</b>	<b>COMPLETELY OPEN</b>



<b>ANGLE OF ROTATION SENSOR, MAIL PILLAR</b>	<b>SEGMENT 6 (4 to 6 very quickly)</b>
<b>ANGLE OF ROTATION SENSOR, TENSIONING BAR</b>	<b>SEGMENT 7</b>
<b>REAR WINDOW, BOTTOM</b>	<b>YES</b>
<b>CONVERTIBLE TOP COMPARTMENT LID RELEASE, LEFT</b>	<b>UNLOCKED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, LEFT</b>	<b>NOT CLOSED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, RIGHT</b>	<b>NOT CLOSED</b>
<b>COWL PANEL LOCKED</b>	<b>NO</b>
<b>COWL PANEL UNLOCKED</b>	<b>YES</b>
<b>CONVERTIBLE COMPARTMENT LID</b>	<b>COMPLETELY OPEN</b>



<b>ANGLE OF ROTATION SENSOR, MAIL PILLAR</b>	<b>SEGMENT 7</b>
<b>ANGLE OF ROTATION SENSOR, TENSIONING BAR</b>	<b>SEGMENT 7</b>
<b>REAR WINDOW, BOTTOM</b>	<b>YES</b>
<b>CONVERTIBLE TOP COMPARTMENT LID RELEASE, LEFT</b>	<b>UNLOCKED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, LEFT</b>	<b>NOT CLOSED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, RIGHT</b>	<b>NOT CLOSED</b>
<b>COWL PANEL LOCKED</b>	<b>NO</b>
<b>COWL PANEL UNLOCKED</b>	<b>YES</b>
<b>CONVERTIBLE COMPARTMENT LID</b>	<b>COMPLETELY OPEN</b>



<b>ANGLE OF ROTATION SENSOR, MAIL PILLAR</b>	<b>SEGMENT 7</b>
<b>ANGLE OF ROTATION SENSOR, TENSIONING BAR</b>	<b>SEGMENT 7</b>
<b>REAR WINDOW, BOTTOM</b>	<b>NO</b>
<b>CONVERTIBLE TOP COMPARTMENT LID RELEASE, LEFT</b>	<b>LOCKED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, LEFT</b>	<b>CLOSED</b>
<b>CONVERTIBLE TOP COMPARTMENT LOCK, RIGHT</b>	<b>CLOSED</b>
<b>COWL PANEL LOCKED</b>	<b>NO</b>
<b>COWL PANEL UNLOCKED</b>	<b>YES</b>
<b>CONVERTIBLE COMPARTMENT LID</b>	<b>NOT COMPLETELY OPEN</b>